




FIELD CUT SIDES OF SEAM COVER. NOTCH BOTTOM LEGS OF UPPER PORTION OF SEAM COVER AS REQUIRED (VARIES PER ROOF SLOPE). BEND LOWER PORTION OF SEAM COVER INTO PLACE. APPLY NON-SKINNING TUBE SEALANT TO SEAM COVER OVERLAPS AND FASTEN IN PLACE WITH 1/8" RIVETS.

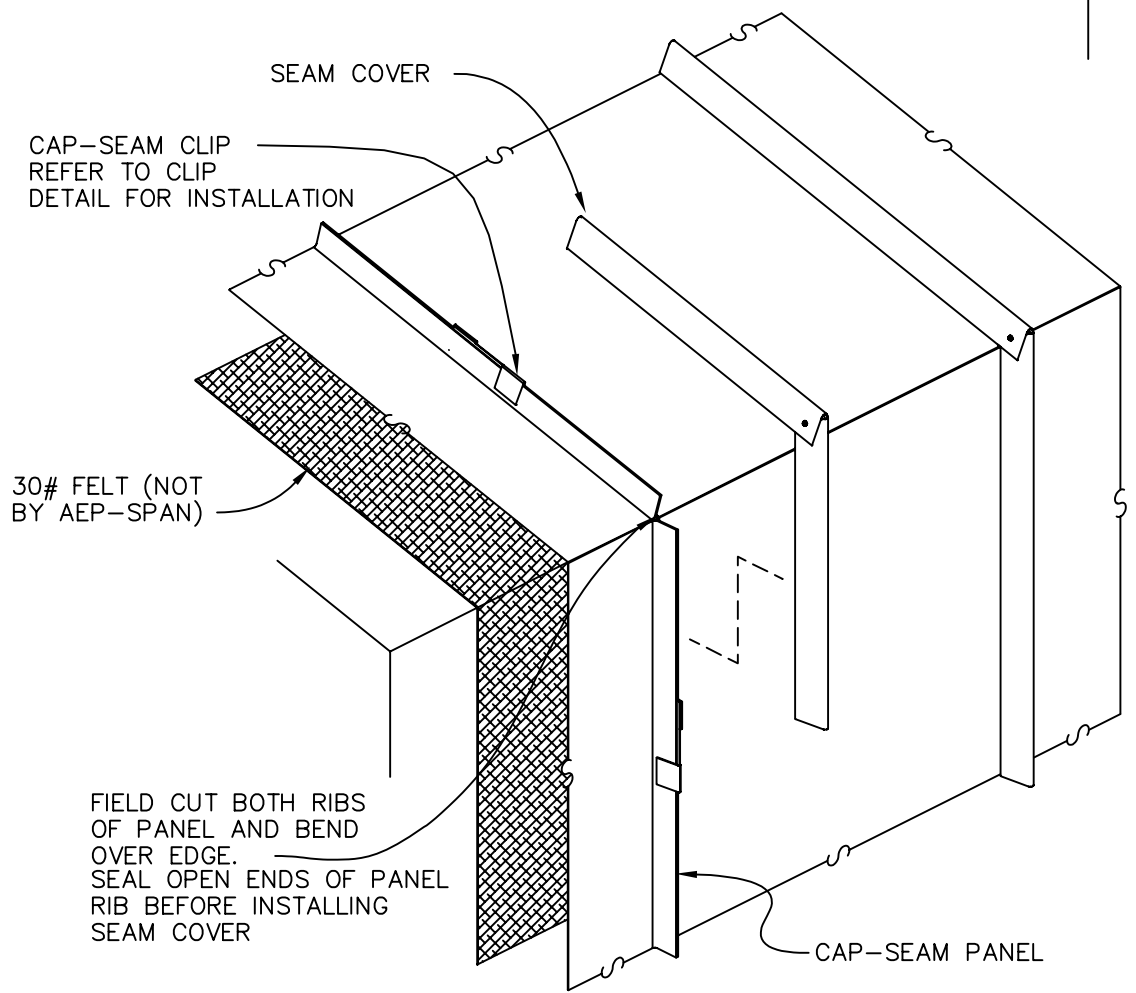

**DESIGN CAUTION:**  
TURNING PANELS DOWN FOR FASCIA MAY ESTABLISH UNWANTED POINT OF PANEL FIXITY.

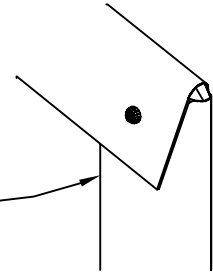

CAP-SEAM



SEAM COVER TRANSITION

CS3D6